

# HITACHI

# Model V-302

# Oscilloscope

# OPERATION MANUAL



# Hitachi Denshi, Ltd.

TOKYO JAPAN



### WARRANTY

This Hitachi Denshi, Ltd. product is warranted against defects in materials and workmanship for a period of two years from the date of shipment, except for probe.

Hitachi Denshi, Ltd. will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to authorized service agency prepaid. Repairs necessitated by misuse of the product are not covered by this warranty.

NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED. Hitachi Denshi, Ltd. IS NOT LIABLE FOR CONCEQUENTIAL DAMAGES.

### NOTE

- ° This instrument should be adjusted at an ambient temperature of +20°C for best overall accuracy.

Allow at least 15 minutes warmup before proceeding.

- ° Polyvinyle chloride (PVC) film is attached on the enclosure and the front panel of the oscilloscope to protect the metal surface. If the PVC film is damaged by scratches, remove it.

To clean the enclosure or the front panel, use neutral detergent. Refrain from using thinner, benzine, alcohol or other chemicals.







## OPERATION MANUAL

### MODEL V-302 OSCILLOSCOPE

#### CONTENTS

	Page
1. Introduction .....	1
1.1 Outline .....	1
1.2 Specifications .....	2
1.3 Composition .....	4
2. Operation .....	5
2.1 Description of Panel Functions .....	5
2.2 Precautions .....	13
2.3 Fundamental Operation Instructions .....	16
3. User Adjustments .....	26
4. Applications .....	28
4.1 Measurement of time difference .....	28
4.2 Measurement of rise (fall) time .....	29
4.3 Measurements of phase shift .....	30
(1) Phase shift between two signals	
(2) Measurement by X-Y operation	
4.4 Measurement of composite video signal .....	35



## 1. Introduction

### 1.1 Outline

MODEL V-302 is a dual trace oscilloscope with bandwidth of DC-30MHz and sensitivity of 1mV/DIV (Pulled X5 Gain). The time base provides a maximum sweep speed time of  $0.2 \mu\text{S}/\text{DIV}$ . When magnified by 10, the sweep speed is 100ns/DIV and with signal delay line in the vertical amplifier, leading edge at high speed pulse can be easily observed. High accelerated voltage CRT, with  $8 \times 10\text{DIV}$  effective display area and post acceleration enables high speed pulses to be clearly displayed.

Engineered for service in the field of television, VTR, and computer, the V-302 is portable, easy and features convenient operation for use in education and industry.

- Wide bandwidth and high sensitivity

In addition to wide bandwidth, DC-30 MHz, (-3dB) this instrument provides high sensitivity of 5mV/DIV. 30MHz frequency is obtained with improved triggered synchronization.

- Bright CRT

By using a new, high brightness CRT, a stable accelerated CRT high voltage, calibration voltage accuracy, and time base are obtained.

- TV Synchronization

A circuit for extracting the sync signal is equipped to trigger easily with a composite video signals. TV vertical or horizontal sync signals is automatically selected by the time base switch.



- ° Two functions of Addition and Subtraction by two signals. Not only phase or level comparison but also addition and subtraction can be observed by two signals functions. This function enables a push pull signal to be displayed accurately.

- ° Improvement in portability and operation

Equipped with a convenient carrying handle and designed for light weight, this unit is excellent both in portability and operation with various functions installed on the front panel.

- ° X-Y functions

Set the switch to X-Y position and X-Y oscilloscope is displayed with CH1 as X axis and CH2 as Y axis.  
as Y axis.

## 1.2 Specifications

### CRT Display

Type 130BTB31

Acceleration Voltage 4kV

Effective display area  $8 \times 10$  div (1 div=9.5mm)

### Vertical amplifier

(Identical for both channels) 5mV/DIV ~ 5V/DIV

Sensitivity: Calibrated in 10 steps (1-2-5 Sequence up to about 2.5 times with variable control)  
\* 1mV ~ 1V/DIV (using X5 GAIN)

Bandwidth DC to 30MHz  
DC 5MHz (using X5 GAIN)



Rise time 12nSec  
 Signal delay time Possible to observe the leading edge of waveform.  
 Input impedance 1M $\Omega$  shunted by 30pF+5pF (direct)  
 Input coupling AC, GND, DC  
 Max.input voltage 600Vp-p, 300V(DC+AC peak)  
 Input connector BNC  
 Time base  
 Sweep speed 0.2  $\mu$ S ~ 0.2S/DIV  
 19 step, 1-2-5 sequence  
 Magnification X10 (max speed 100 ns/div)  
 Dual trace display  
 Mode CH1, CH2 (x-Y), DUAL, ADD, DIFF  
 ADD CH1 and CH2 are added  
 DIFF CH1 and CN2 (inverted signal) are added  
 X-Y display  
 (X=CH 1 Y=CH2)  
 Sensitivity Y axis: 5mV/DIV ~ 5V/DIV  
 X axis: 5mV/DIV ~ 5V/DIV  
 Bandwidth X axis: DC 500 kHz  
 X-Y phase Less than 3° at 10 kHz  
 Synchronization  
 Trigger sensitivity

Frequency	INT. trig	EXT. trig
20Hz ~ 5MHz	0.5DIV	200 mV
5MHz ~ 30MHz	1.5DIV	800 mV

Mode                      NORMAl trigger and AUTOMatic trigger  
                              Automatic (sweep free run)  
                              Normal (sweep run when triggered)

TV(+), TV(-)

Extracts the synchronizing signal from composite video signal and provides stable synchronization. Slope switch is selected according to polarity of video signals.

Source                    INTernal (CH1 or CH2) or EXTernal, or LINE.

#### Calibration

Waveform                Square wave 1kHz  $\pm 10\%$  (typ)

Voltage                 0.5 Vp-p  $\pm 3\%$

Power supply            AC 100/120/220/240V

Size and weight        190 (H)  $\times$  275 (W)  $\times$  400 (D)mm 8.5kg

(7.5 (H)  $\times$  10.8 (W)  $\times$  15.7 (D)in 18.7 lbs)

#### 1.3 Composition

(1) V-302 oscilloscope ..... 1

(2) AT-10AB1.5 Probe ..... 2


(3) Operation manual ..... 1


EXT. TRIG	INT. TRIG	TRIGGER
100 V	0.5 V	100 V
100 V	1.5 V	100 V



## 2. Operation

### 2.1 Description of Panel Functions

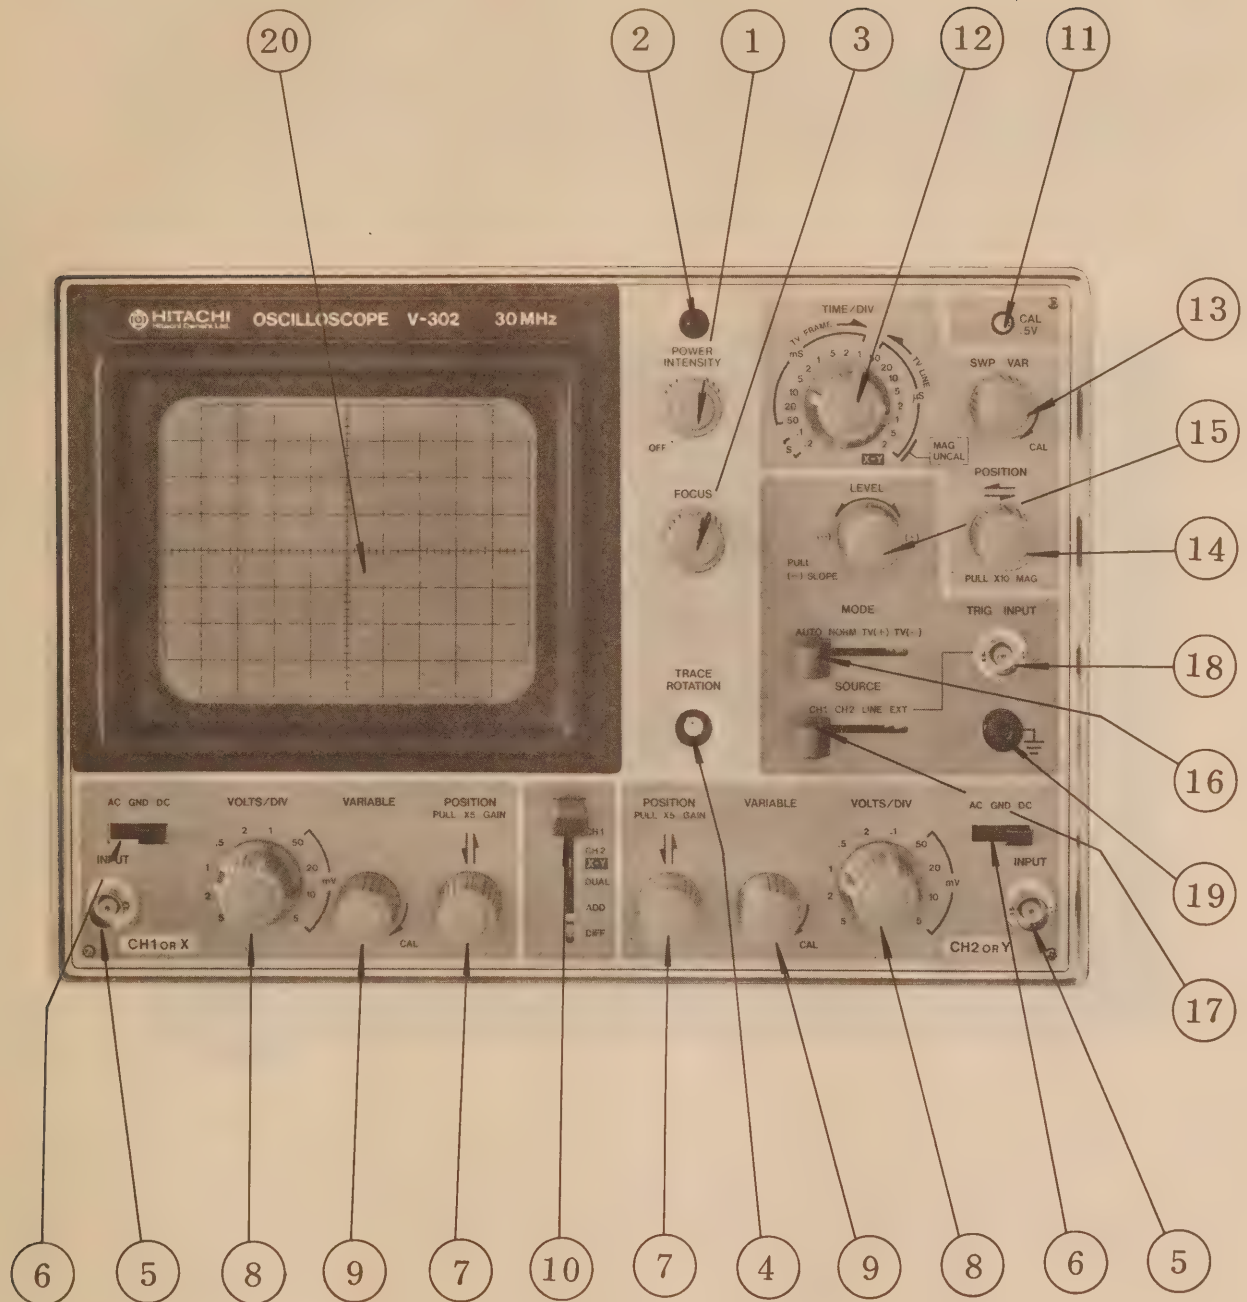

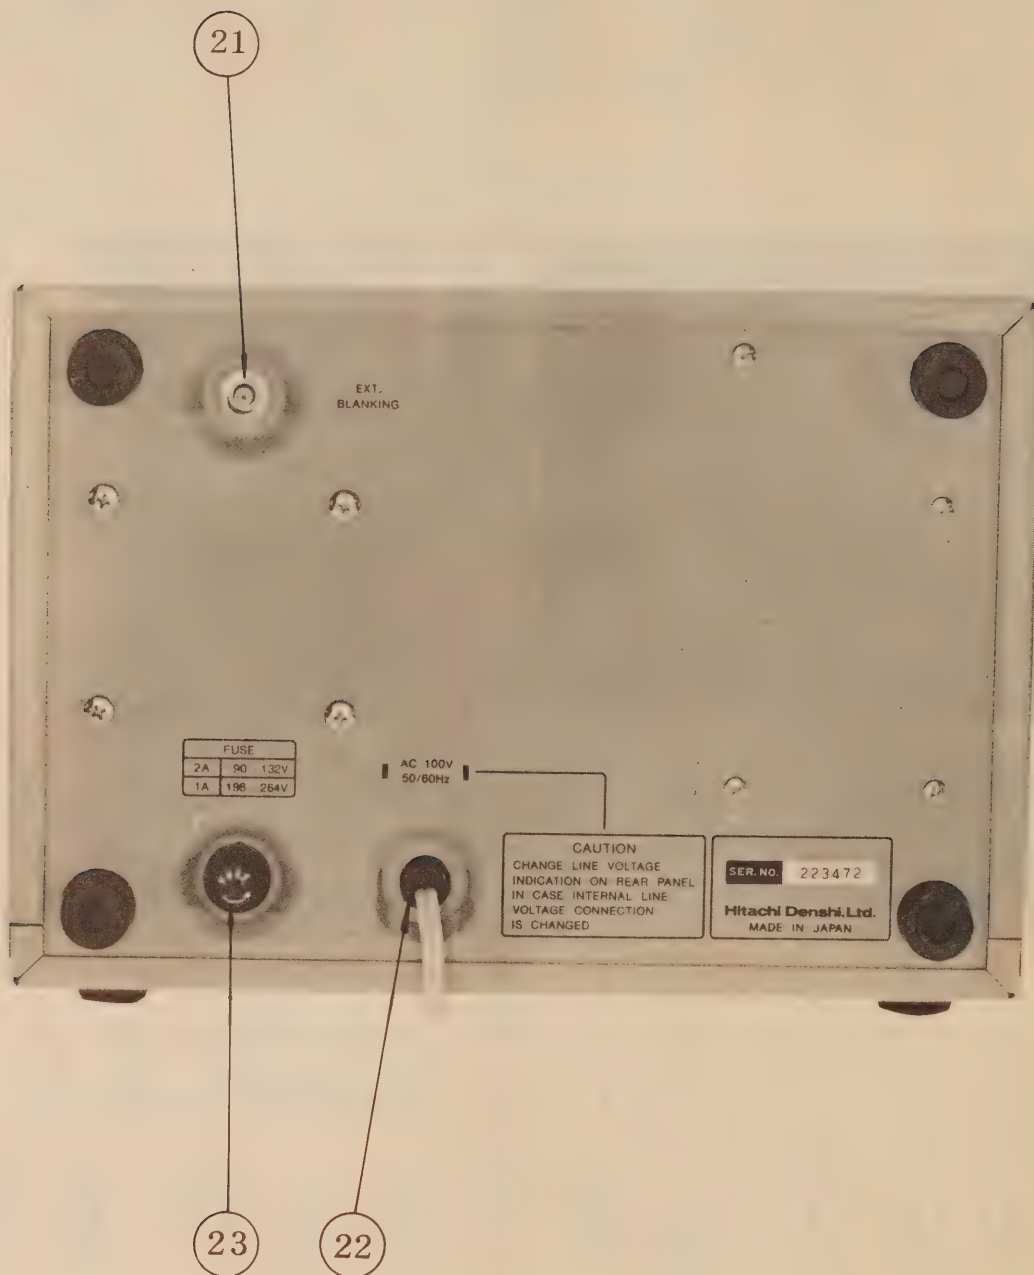



① POWER/INTENSITY

Turns the power on or off and adjusts trace brightness s on the screen. Clockwise adjustment increases brightness

② Pilot lamp

Lights when the power is on.

③ FOCUS

Adjusts focus grid voltage for clarity of the display.

④ TRACE ROTATION

Corrects slight tilting of trace caused by external magnetic fields.

⑤ INPUT

CH1 or X IN

This is an input plug for use with the CH1 vertical amplifier and X-axis (horizontal axis) amplifier during X-Y operation.

CH2 or Y IN

This is an input plug for use with the CH2 vertical amplifier and Y-axis (vertical axis) amplifier during X-Y operation.

Do not exceed the maximum permissible input voltage, 600Vp-p or 300V (DC + AC peak)

## ⑥ AC-GND-DC

(Alternating Current-Ground Switch-Direct Current)

Switches the coupling of the signal fed to the vertical axis input ⑤. DC coupling is obtained on the DC position, On AC position, the direct current component is blocked by a capacitor. The GND position grounds the input of the amplifiers and opens the input terminal ⑤.

## ⑦ Position (PULL X5 GAIN)

CH1 ↓↑ (Vertical position adjustment)

With the knob turned clockwise, the waveforms of CH-1 move upward. When the knob is turned counterclockwise, the waveforms move downward.

CH2 ↓↑ (Vertical position adjustment)

Clockwise rotation will move pattern up, and counterclockwise rotation will move pattern down.

When the knob is pulled, the vertical axis sensitivity at each range of VOLTS/DIV is increased by 5 times.

## ⑧ VOLTS/DIV

(CH 1 or ☒ sensitivity switch)

This is a knob for switching the sensitivity of the input signal fed to CH 1 ⑤. Switching action is accomplished in ⑩ steps from 5mV/DIV to 5V/DIV. On X-Y operation, the knob functions to change the sensitivity of the X-axis.

VOLTS/DIV (CH2 or ☒ sensitivity switch)

This is a knob for switching the sensitivity of the input signal fed to CH2 ⑤. Switching action is accomplished in 10 steps from 5mV/DIV to 5V/DIV. On X-Y operation, the knob functions to change the sensitivity of the Y-axis.




To measure by the use of the indicated voltage sensitivity, be sure to set each of the VARIABLES (9) to CAL by turning fully clockwise. If the signal is applied to the input terminal (5) by the use of a 1/10 low capacitance probe, the values are ten times the indicated voltage.

## (9) VARIABLE

This is a vertical axis sensitivity fine adjustment which is capable of attenuating to less than 1/2.5 by indication of each range of VOLTS/DIV.

### VARIABLE KNOB

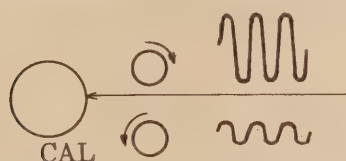

Amplitude increases

Amplitude decreases

To measure a voltage by the use of voltage sensitivity indicated by VOLTS/DIV, turn the VARIABLE clockwise fully to CAL.

## (10) MODE

### ◦ CH1

Only the input signal applied to CH 1 is displayed.

### ◦ CH2

Only the input signal applied to CH 2 is displayed.

### ◦ DUAL

Dual trace display can be obtained by CHOP or ALT

Time Switch (12) does automatic-changeover to CHOP at 1mS/DIV-0.2s/DIV, and to ALT at 0.2  $\mu$ S -0.5mS/DIV.

Time Switch (12) does automatic-changeover to CHOP at 1mS/DIV-0.2S/DIV, and to ALT at 0.2  $\mu$ S-0.5mS/DIV.

◦ ADD (Addition)

The input signals of CH 1 and CH 2 are algebraically added and displayed.

◦ DIFF

The input signals of CH 1 and inverted signals of CH 2 are algebraically added and displayed.

(11) CAL .5V (Calibration wave)

Signal output terminal for amplitude and probe calibration. The frequency is approx. 1KHz.



(12) TIME/DIV (Sweep speed selection)

This is sweep time change switch. A 19-position switch from 0.2  $\mu$ S/DIV to 0.2S/DIV selects 19 fixed sweep speeds. When making a measurement at a given TIME/DIV setting, adjust variable knob (13) fully clockwise to CAL. When the switch is set to (X-Y) position, X-Y oscilloscope works with CH 1 as X axis and CH 2 as Y axis.

(13) SWP VAR (Time adjustment of Sweep Time)

This is fine adjustment covering time not covered by Time change-steps.

When measuring with an indication of TIME/DIV, turn VARIABLE fully clockwise to CAL.





⑭ POSITION (PULL X10 MAG)

The knob is used to position the trace in the horizontal direction. When the knob is pulled out, the sweep is magnified by a factor of 10.

⑮ LEVEL (Slope)

The control knob is used to adjust the triggering level of the sweep.

In operation, the knob is generally at the AUTO setting. When triggered sweep is desired against the positive slope of waveforms displayed on the screen, set this switch to (+) position, and against negative slope, set it to (-) position.

⑯ MODE

° AUTO : When there is no signal or a signal stepping out of synchronization, the sweep line will appear automatically.

° NORM : This mode provides synchronizing sweep only when synchronization is required.  
If there is no signal or a signal stepping out of synchronization, the sweep line will not appear. This mode is employed for synchronizing a low frequency signal of more than 20Hz.

° TV(+), TV(-)

Video signals synchronized with horizontal sync pulse and vertical sync pulse is observed. Composite video signals can be observed at various stages of the TV receiver to determine whether circuits are performing normally.

## ⑪ SOURCE

CH1, CH2 : Used when synchronization is made by observing signal for CH1 or CH2.

LINE : Used when observing a signal synchronized with the frequency of AC power source.

EXT : Used when synchronization is made by a signal applied to EXT input connector ⑫, independently from observation signal.

⑫ TRIG INPUT : This is an input BNC connector for external sync signal, or X axis.

⑬ GND : This is the ground terminal of oscilloscope.

## ⑭ Graticule

The size of graticule is 8 by 10 div (1 div=9.5mm). A sub-scale at intervals of 1/5 div is imprinted on the X and Y axis of the graticule to facilitate of making measurement.

Vertical Voltage sensitivity (Volt/DIV) and Sweep time (Time/DIV) is calibrated and can be read with reference to the sub-scales.

## ⑮ EXT. BLANKING

This is a terminal for applying a blanking signal from an external source.

The trace displayed on the screen may be intensity - modulated where pulse signal or time-scale marks are required.

5V AC signal applied at the connector on the rear of the oscilloscope will provide alternate brightness and blanking of the trace. Positive voltage input decreases brightness.



②② AC cord

②③ FUSE

The fuse is released when the cap is rotated counter-clockwise.

FUSE: 1A 6.35 $\phi$   $\times$  31.8 (mm)

Caution - Replace only with same type and rating fuse.

2.2 Precautions

(1) Power Source Voltage

Apply a power source voltage that is within  $\pm 10\%$  of the rated values as given in the table below.

Operation with a voltage less than 10% of rated value may result in improper performance and a voltage more than 10% of rated value may damage power supply circuitry.

Rated Voltage Values	Applicable Voltage Ranges	Fuse
AC 100V	90 - 110V	2A
AC 120V	108 - 132	Fast Blow
AC 220V	198 - 242	1A
AC 240V	216 - 264	Fast Blow

(2) Signal Input

Vertical input terminal	MAX 600V (ACp-p), 300V (DC+ AC peak)
-------------------------	--------------------------------------

External synchronizing signal input terminal	MAX 300V (DC + AC peak)
--	-------------------------

EXT BLANKING	30V (DC + AC peak)
--------------	--------------------

(3) Horizontal Trace Tilt

Horizontal Trace, in some case, tilts due to the earth's magnetism.

(4) Operation in a Powerful Magnetic Field

Operation in a powerful magnetic field will cause distortion of waveforms or make traces tilt excessively. Special care should be exercised when operating the instrument close to machinery or equipment using a large transformer.

(5) FUSE

Note the type and rating of the fuse used.

(6) Operation in a Hot and Humid Place

This instrument is designed to operate in a temperature range of 0°C to +40°C and humidity range of 40



to 90%. Operation in a severe environment may shorten the life of the instrument.

(7) Intensity

A burn-resisting fluorescent material is used in the cathode ray tube. If the cathode ray tube is left with a bright dot or bright line, or with unnecessarily raised intensity, its fluorescent screen may be damaged. When observing waveforms the intensity should be maintained at the minimum necessary level. If the instrument is left on for extended periods, lower the intensity and obscure the focus.

(8) EXT. BLANKING

When a cable is connected to the EXT BLANKING connector don't place the oscilloscope in an upright position damage to the cable.

(9) The highest sweep speed is 100 ns/DIV.

Sweep time switch can be changed from 0.2  $\mu$ S/DIV to 0.2S/DIV in accordance with your requirements, and by using the knob (14), the sweep time is magnified by 10 in each range.

Therefore, as permissive ranges of magnified sweep speed are 0.1  $\mu$ S/DIV 0.2S/DIV, don't use MAG X10 at 0.2  $\mu$ S/DIV, 0.5  $\mu$ S/DIV.

## 2.3 Fundamental Operation Instructions

The fundamental operation for observing waveforms with the Oscilloscope V-302 are described below.

### (1) Preparation

Before using the V-302 set the controls are switches as follows.

In addition, use these setting with checking proper operation of the instrument.

- |                      |                             |
|----------------------|-----------------------------|
| 1. FOCUS (3)         | Midposition                 |
| 2. AC GND DC (6)     | GND                         |
| 3. Position (7)      | Midposition                 |
| 4. VOLTS/DIV. (8)    | 10 mV                       |
| 5. VARIABLE (9)      | Turn fully clockwise to CAL |
| 6. MODE (10)         | CH1                         |
| 7. TIME/div (12)     | 0.5mS/DIV                   |
| 8. SWP VARIABLE (13) | Turn fully clockwise to CAL |
| 9. Position (14)     | Midposition                 |
| (PULL MAG.X10)       | (PUSH IN X 1)               |
| 10. LEVEL (15)       | Midposition                 |
| PULL (-) SLOPE       | Push-in (+) SLOPE           |



11. MODE (16) AUTO

12. SOURCE (17) INT


After all settings are made, set the POWER/INTENSITY switch (1) at ON, and adjust the knob at midposition. After about 10 seconds, a bright line will appear on the screen. Adjust the FOCUS (3) controls for a clear display of the traces.

13. Connect the attached probe to INPUT (5) and CAL (11) terminals. For use of the probe, refer to Section; "How to Use a Low-capacity/Direct Probe."

(2) Check of Gain by Calibrated Waves

After all settings are made as shown 2.3 (1), ascertain that a square wave with an amplitude of 5 DIV. is displayed on the screen. This indicates that the instrument is operating properly.

(3) How to use a low-capacitance/direct probe

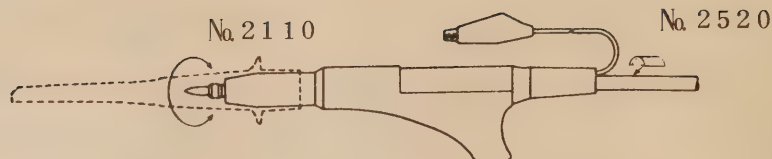

ITEM	SPECIFICATIONS	ACCESSORIES
Bandwidth	DC~30MHz (+1dB) DC~40MHz (+3dB)	Pincher tip No.2110  Cable marker No.2520
Input R	=10MΩ	
Input C	=22pF (at oscilloscope input 25pF)	
ATT Ratio	1/10	
MAX Input voltage	600V (DC+AC Peak)	

The knob and hook cover may be turned in any direction, but care must be used not to disconnect the ground over that holds the hook cover in place by an internal spring, which could loosen or break.

#### (4) Measurement


The probe exhibits high resistance and capacitance at X 10, however, the input voltage is attenuated to 1/10. This must be accounted for in voltage measurements.

Measured voltage = Sensitivity of oscilloscope V/DIV.  
X screen amplitude div X 10 (X 10), it is necessary to correct the pulse characteristic by adjusting the capacitor in the probe for flat top of the square wave calibration voltage.

## (5) Adjustment of Probe

When observing the signal waveforms of high impedance circuits, the operation of the signal source and waveforms on the screen may change due to the input impedance of the oscilloscope, parallel capacitance of a coupling line, induction noise, and other effects leading to measurement error. The use of a low-capacitance probe avoids these effects. A low-capacitance probe of 10:1 attenuation such as the AT-10AB should be used for high impedance circuitry measurements. Its input impedance is  $10\text{M}\Omega$  at  $22\text{pF}$ .

When adjusting the probe observing CAL (11) , adjust the capacitance correction trimmer in the probe using a small screw driver, to provide proper square wave compensation.

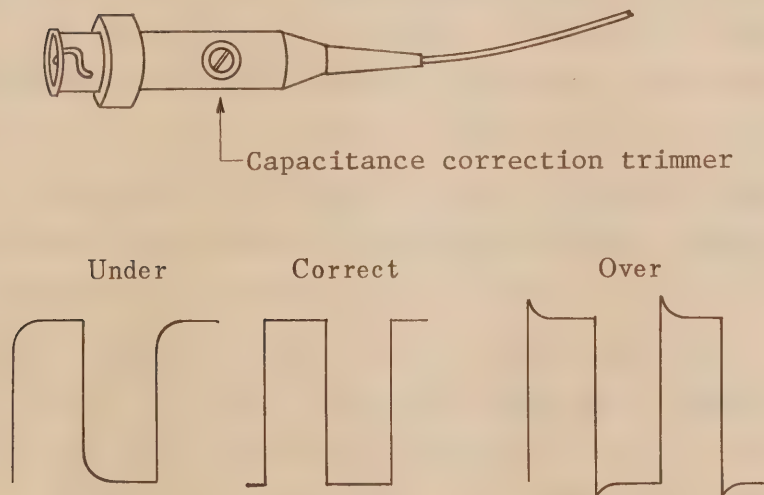



## (6) Dual Trace Measurement

Two vertical axis input circuits are provided in this instrument. The waveforms of the two input signals are alternately shown on the screen by means of an electronic switch. However, since there is only one horizontal sweep circuit, it is not possible to have two synchronized or locked-in waveforms of two unrelated, independent input signals simultaneously on the screen. Two different methods are available for alternately switching of two signals making use of the electronic switch.

ALT, and CHOP are selected automatically by TIME/DIV switch.

Time Switch of (12) does automatic-changeover to CHOP at  $1\text{mS}/\text{DIV} \sim 0.2\text{S}/\text{DIV}$ . and to ALT at  $0.2\mu\text{S}/\text{DIV} \sim 0.5\text{mS}/\text{DIV}$ .

## (7) Precautions on Direct Connection and Using a Probe

Two different methods are available for applying signals. One is to connect a lead wire to the input terminal of the oscilloscope directly, and another is to use a probe.

When viewing a small signal in a circuit having high signal source impedance, error may occur in measurement due to the effect of parallel capacitance or induced noise in the input cable. The following precautions should be observed to avoid false readings. Generally, with the exception of a low-impedance circuit, the use of a lead wire should be avoided. If a lead wire other than the probe

or shielded wire is used, make the lead as short as possible. When using a shielded wire in circuit having high impedance, attention should be paid to the loading effects of the sum of the input capacitance of the oscilloscope and the distributed capacitance of the probe or shielded wire on the signal source. The input terminal of the oscilloscope has a capacitance of about 30pF in parallel with  $1M\ \Omega$ . If the effect of this parallel capacitance on the high impedance signal source cannot be ignored, the use of the low capacitance X10 probe is recommended.

(8) Low-capacitance probe

To avoid the ill effects by direct connection, use a low-capacitance probe (X10) whenever possible. When this probe is used, input impedance is  $10M\ \Omega$ , 22pF, making it possible to reduce the loading effects upon the signal source to a great extent. However, when the probe is used at X10, the input signal is attenuated to 1/10. This must be taken into account in all measurements.

(9) Ground Connection

When using a probe, connect to a ground point close to the signal source and use the probe ground wire.

Triggering on waveforms

The most important factor in operating is to lock and display waveforms properly before measuring them with the oscilloscope.

(10) How to provide synchronization

- ° Select the position of the SOURCE switch (17), according to the connector where sync signal is supplied, also select the position of the MODE selector.

Select the sweep mode by the MODE selector (16) .  
When no input signal is applied or the trigger level is not correct, set the selector to NORM to remove waveforms on the screen.

The triggered sweep circuit of this instrument stops functioning if a trigger pulse is not produced as a sweep starting pulse. It is therefore necessary to select this sweep according to purpose desired.  
Generally, for waveforms which have a frequency of 20Hz or more and are not complex, use AUTO triggering. At AUTO triggering, the sweep circuit is automatically placed in the free-run state when the aforementioned trigger pulse is not produced and a horizontal trace is displayed irrespective of sweep time set by the knob (12) .

Next, set the synchronizing polarity to either PUSH (+) or PULL (-) by the level knob and provide synchronization by turning the knob to stabilize the waveform.



\* Explanation of synchronizing polarity level.

PUSH (+) SLOPE



The polarities synchronize with each other in the solid line parts.

PULL (-) SLOPE



\* Explanation of the synchronizing level.



When the slope is positive (+)




When the slope is negative (-)

(11) How to observe waveforms

If (8) VOLTS/DIV is set to 0.5V, then the amplitude is  $0.5 \times 6 = 3.0V$

If (12) TIME/DIV is set to 0.5ms, then the period is  $0.5 \times 4 = 2mS = 0.002S$

So the frequency is  $1/0.002 = 500Hz$

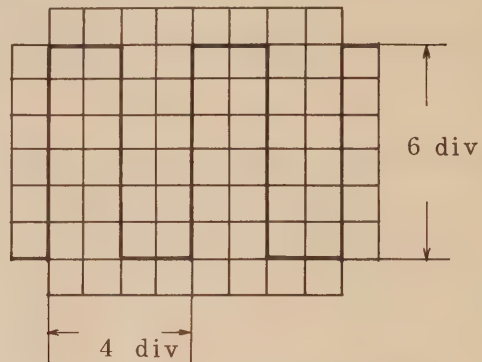

Example of measurement of voltage, period and frequency

Caution:

Keep the VARIABLE knob (9) at the CAL position and the SWP VAL knob (13) at the CAL position.

At the CAL position the waveform is calibrated by the specified value of each range.

(12) Magnification of part of waveform

Turn the Position (PULL X10 MAG) knob (14) to locate the 1 division of trace to the horizontal graticule center and pull the knob. That part will be magnified to cover the full length of the graticule.

Any 1 division of the sweep can be displayed as a 10 division trace by use of the knob of (14) .

(13) Operation of X-Y

Set the knobs as follows:

(12) TIME/DIV : set to X-Y

CH1 INPUT : feed X-axis signal (horizontal-axis signal) as input.


CH2 INPUT : feed Y-axis signal (vertical-axis signal) as input.

By this setting the X-axis sensitivity operates by means of CH1 VOLTS/DIV and the Y-axis sensitivity by means of CH2 VOLTS/DIV as an X-Y oscilloscope providing a maximum sensitivity of .1mV/DIV.

However, the position in the Y direction (vertical direction) operates by means of CH 2  $\downarrow \uparrow$  POSITION and the position in the X direction (horizontal direction) operates by means of  $\leftrightarrow$  POSITION.



### 3. User Adjustments

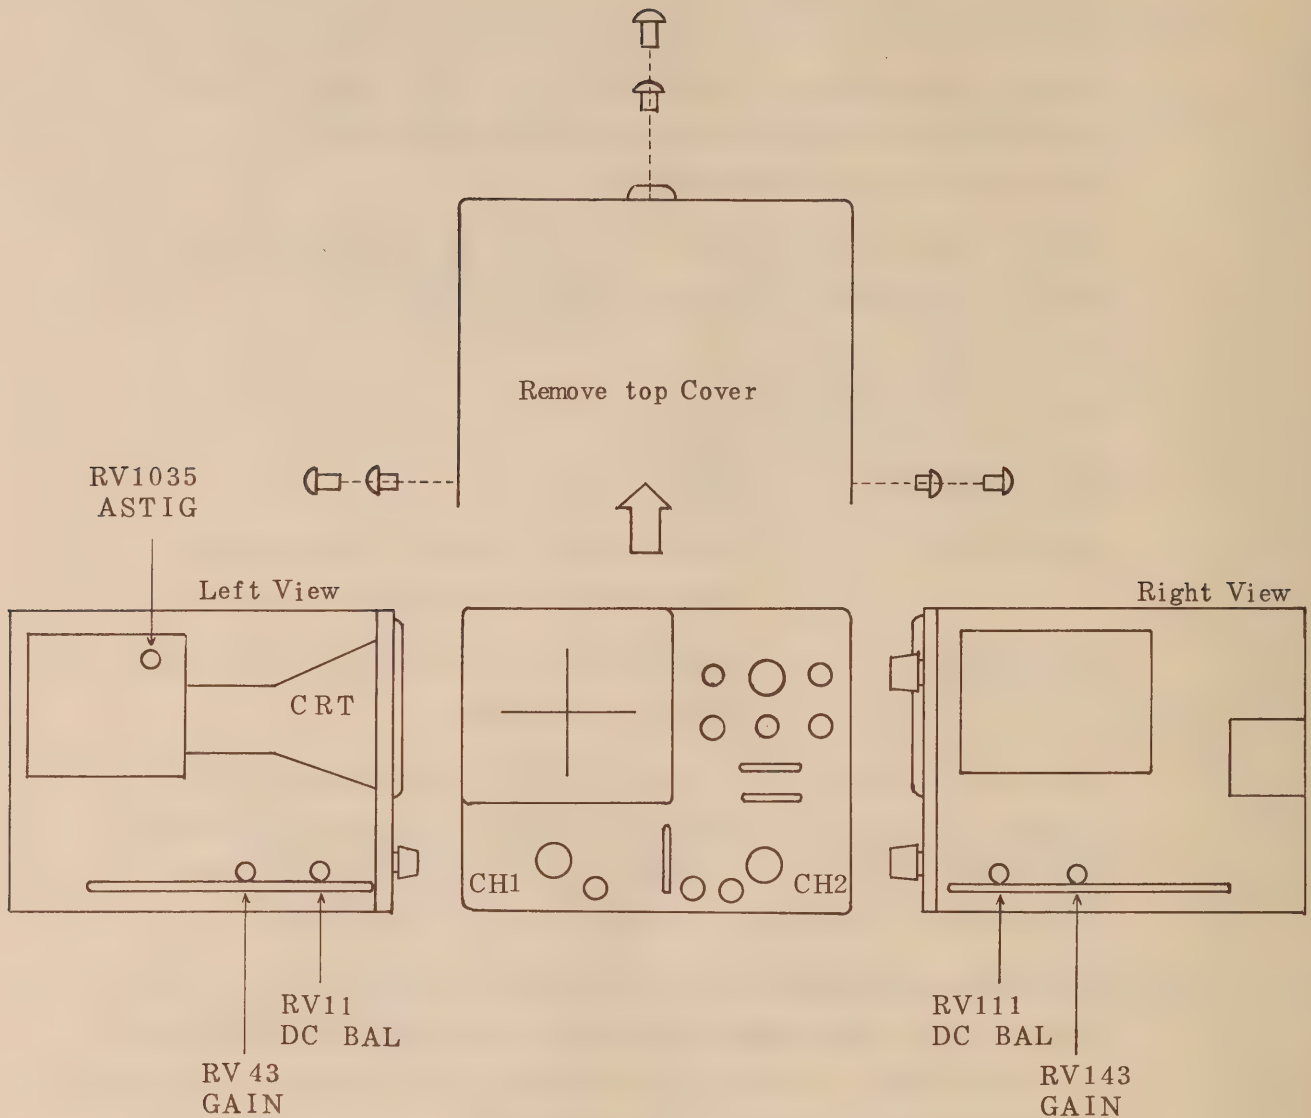

The following adjustments should be made by means of a screw driver.

#### (1) TRACE ROTATION (Trace slope)

Adjust the TRACE ROTATION (4) on the front panel when slight tilting of the trace is caused by the effect of external magnetic fields.

Make certain that tilting of the traces is not caused by the effect of unusually strong external magnetic fields due to the position of the oscilloscope.

(2) ASTIG ADJUSTMENT

Set the knob TIME/DIV (12) to X-Y , and MODE (10) to CH2 X-Y observing the spot on the center of the screen.

RV1035 astigmatism adjustment provides optimum spot POWER/INTENSITY roundness when used in conjunction with FOCUS (3) and POWER/INTENSITY (1) control. Little readjustment of this control is required after initial adjustment.

(3) Adjust VOLTS/DIV Balance (STEP ATT BAL)

- a. Position the trace to the center horizontal line with the vertical POSITION control.
- b. check - Change the V/DIV switch from 5mV to 10mV. Trace should not move more than 0.1 division.
- c. Adjust RV11(DH1), or RV111(CH2), for minimum trace shift when rotation the V/DIV switch from 5m volt to 10m volt. If necessary, rotate the vertical position control to keep the trace in the center of the screen.

(4) Vertical GAIN Adjustment

Set the knob (8) for 10mV/DIV.

Connect the CAL output (11) to the CH1 or CH2 connector with probe.

Check - CRT display for five divisions of deflection. Adjust the GAIN controls, RV43 (CH1) or RV143 (CH2), for exactly five divisions of deflection.

## 4. Applications




The most useful feature of a dual-trace oscilloscope is its capability for viewing simultaneously two waveforms that are frequency or phase related, or that have a common synchronizing voltage, such as in digital circuitry. Simultaneous viewing of "cause and effect" waveforms is an invaluable aid to the circuit designer or the repairman. Several possible applications of the dual trace oscilloscope will be reviewed in detail to familiarize the user further with the basic operation of this oscilloscope.

### 4.1 Measurement of time difference

When measuring the time difference between two signals, the triggering signal (17) CH1 is selected as the reference for comparison between them.

For a pulse train as shown in the adjacent diagram (a), CH1 is taken as the synchronizing signal source as shown in the diagram (b), while CH2 is used as the synchronizing signal source as shown in diagram (c).

Accordingly, when investigating how much the signal CH2 lags behind the signal CH1, the latter is taken as the synchronizing signal source; in a reverse case the former is used as the synchronizing signal source.

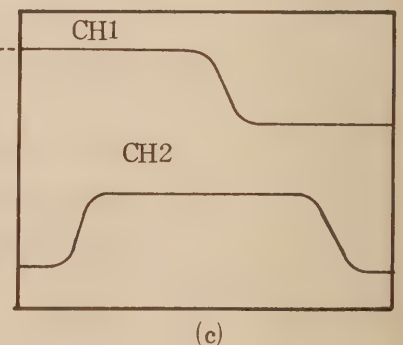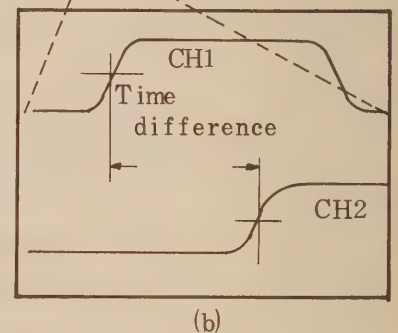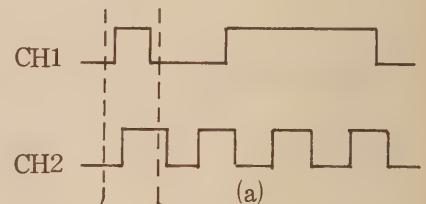



A signal with a phase lead is chosen as the synchronizing signal source. If this is reversed, the part, whose observation is required, may sometimes fail to appear on the screen surface.

Then, for two signals that appear on the screen surface, make their amplitudes equal to each other or superimpose them one upon the other. The time difference between them is measured by the time interval between the 50% points of their amplitudes. The measuring method by superimposition is more convenient than that by the equal amplitude.



CAUTION:

Since a pulse wave contains a number of harmonic components (harmonic waves) depending on its width or period, it is necessary to treat it with the same care as of for high-frequency signals. Therefore, use either a probe or a coaxial cable and make its ground lead wire as short as possible.

#### 4.2 Measurement of rise (fall) time

The measurement of the rise time of a pulse requires not only the attention described above but also attention to measuring errors.

The relationship between the rise time of a measured pulse.

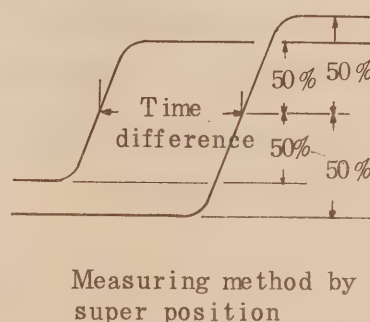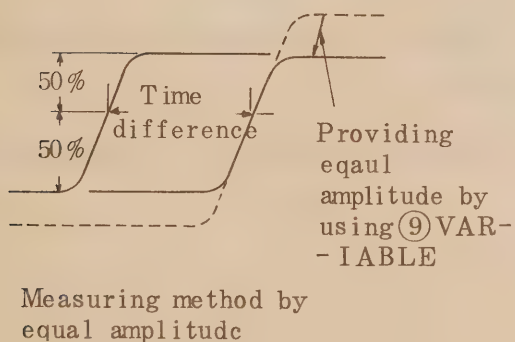

Trx and the rise time of an oscilloscope Tro and the rise time shown on the screen surface Trs is as follows:

$$\text{Trx}^2 + \text{Trs}^2 = \text{Tro}^2$$

If the rise time of the measured pulse is sufficiently larger than that of the oscilloscope (12nS for this oscilloscope), the error caused by the latter on measurement may be ignored, but if the latter approximates the former to a marked degree, a measuring error is produced.

A true rise time is obtained by:

$$\text{Trx} = \sqrt{\text{Tro}^2 - \text{Trs}^2}$$

Generally speaking, for circuit which produces no waveform distortions, such as tilt, overshooting etc, the relationship between the frequency band and the rise time can be expressed by:

$$\text{fc} \times \text{tr} \approx 350$$

where fc = frequency band (MHz) and tr = rise time (ns).

#### 4.3 Measurement of phase shift

Measurement of a phase shift can be made by several methods using an oscilloscope.

Typical applications are in circuits designed to produce a specific phase shift, and measurement of phase shift distortions in audio amplifiers and networks.

In all amplifiers, a phase shift is always associated with a change in amplitude response.


For example, at the -3dB response points, a phase shift of 45° occurs.

(1) Phase shift between two signals

To measure a phase shift between two signals of the same frequency, the dual trace display system can be utilized up to the upper limit frequency of the amplifier.

First, position both signals on the center line of the scale, e.g. just 4 div, as shown in the following figure by means of the VARIABLE and horizontal positioning knobs.

Next, set the distance where the center of the waveform of the base channel intersects with that of the scale to 8 div horizontally.

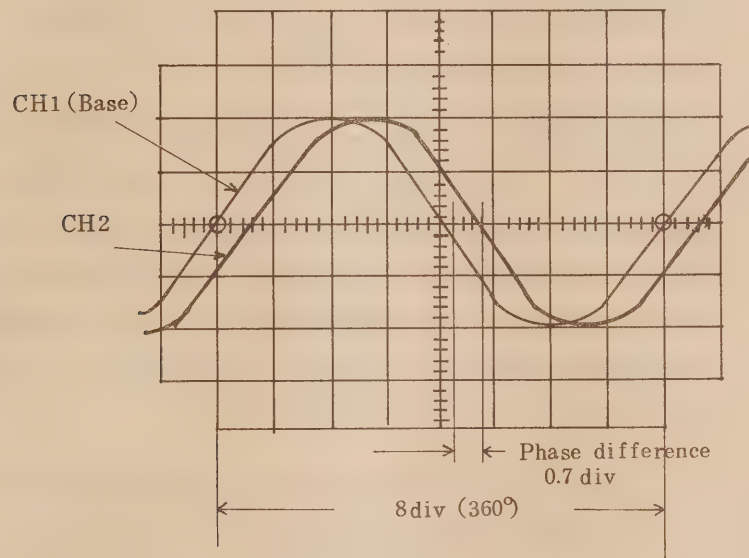



As shown in the above figure, set 1 cycle,  $360^\circ$  to 8 div. Then,  $\frac{360^\circ}{8\text{div}} = 45^\circ/\text{div}$ .

Accordingly, the phase difference in the above example can be calculated as follows:

Horizontal distance on the screen: 0.7 div

Phase difference =  $45^\circ/\text{DIV} \times 0.7 \text{ div} = 31.5^\circ$

If the portion of the phase difference is much smaller, use the MAGNIFIER at the  $\times 10$  position in the above setting. At this time,  $360^\circ$  is displayed in  $8 \text{ div} \times 10$ .

Then,  $\frac{360^\circ}{8 \text{ div} \times 10} = 4.5^\circ/\text{DIV}$  ( $0.2 \text{ div} = 0.9^\circ$ )

## (2) Measurement by X-Y operation

The phase shift between two signals of the same frequency can also be measured using a Lissajou's figure by X-Y operation.

A sine wave input is applied to the audio circuit being tested. The same sine wave input is applied to the vertical input of the oscilloscope, and the output of the tested circuit is applied to the horizontal input of the oscilloscope. The amount of phase difference between the two signals can be calculated from the resulting waveform.

1. Using an audio signal generator with a pure sinusoidal signal, apply a sine wave test signal at the desired test frequency to the audio network being tested.

2. Set the signal generator output for the normal operating level of the circuit being tested. If desired, the circuit's output may be observed on the oscilloscope. If the test circuit is overdriven, the sine wave display on the oscilloscope is clipped and the signal level must be reduced.
3. Connect the Channel 2 probe to the output of the test circuit.
4. Set the sweep TIME/DIV to X-Y position.
5. Connect the Channel 1 INPUT probe to the input of the test circuit. (The input and output test connections to the vertical and horizontal oscilloscope inputs may be reversed.)
6. Adjust the Channel 1 and 2 gain controls for a suitable viewing size.
7. Some typical results are shown in Fig.(b). If the two signals are in phase, the oscilloscope trace is a straight diagonal line. If the vertical and horizontal gains are properly adjusted, this line is at a  $45^\circ$  angle.

A  $90^\circ$  phase shift produces a circular oscilloscope pattern.

Phase shift of less (or more) than  $90^\circ$  produces an elliptical oscilloscope pattern. The amount of phase shift can be calculated from the oscilloscope trace as shown in Fig.(a).

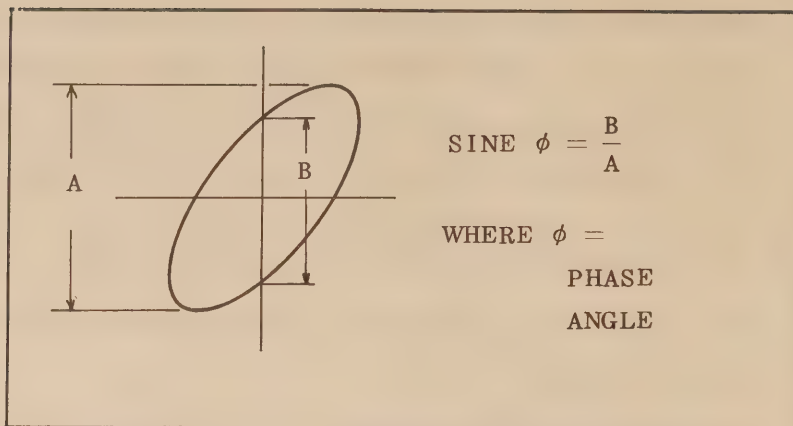


Fig.(a) Phase shift calculation








 NO AMPLITUDE DISTORTION NO PHASE SHIFT	 AMPLITUDE DISTORTION NO PHASE SHIFT
 180° OUT OF PHASE	 NO AMPLITUDE DISTORTION PHASE SHIFT
 AMPLITUDE DISTORTION PHASE SHIFT	 90° OUT OF PHASE

Fig.(b) Typical phase measurement oscilloscope displays.




## 4.4 Measurement of composite video signal


### 1. Video Signal

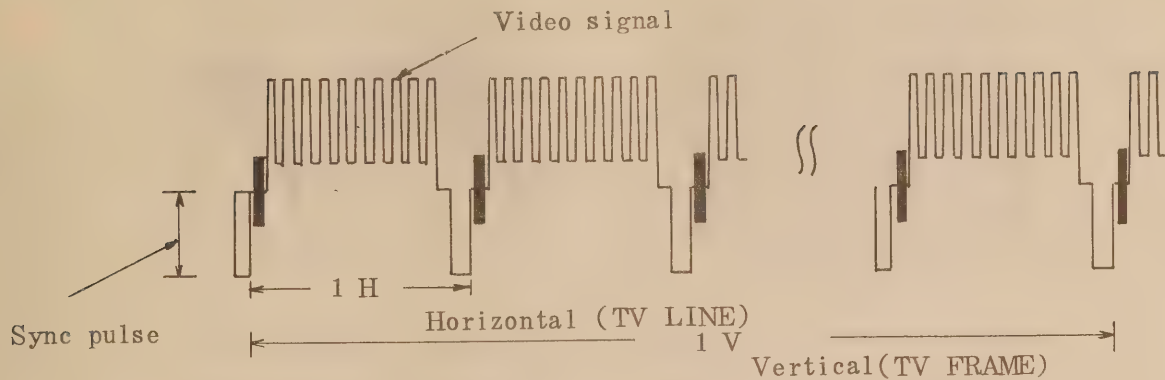

An internal TV Sync Separator circuit permits stable line or field-rate triggering from displayed composite video waveforms.

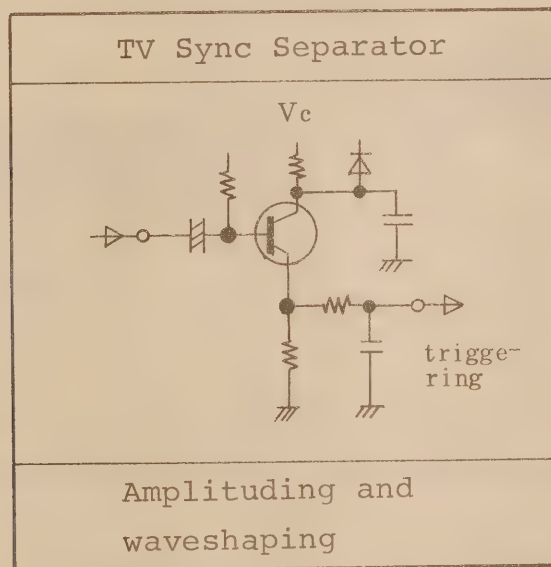


Observing the vertical  
signal

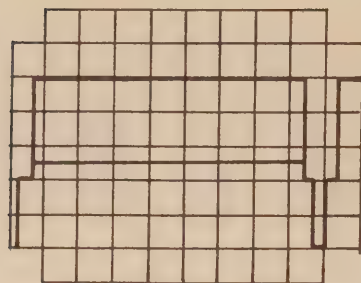


TIME/DIV range: FRAME  
(0.1mS/DIV ~ 0.2S/DIV)

Observing the Horizontal  
signal

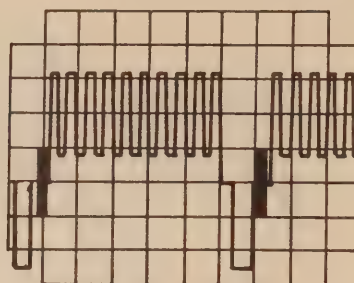

TIME/DIV range: LINE  
(50 $\mu$ S/DIV ~ 0.2 $\mu$ S/DIV)

TV(-) : generally

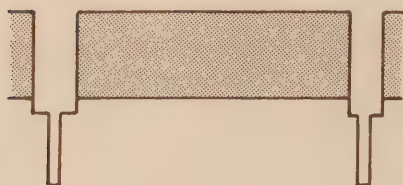

TV Sync (-)

TV (+)



TV Sync (+)

When the sync and blanking pulses of the displayed video signals are negative, set the MODE switch (16) to TV(-).

If the sync and blanking pulses are positive, set the switch (16) to TV(+).

Note : Using the MODE switch (16) with RV(-), don't set the slope switch (15) to (-) slope.







# HITACHI PORTABLE OSCILLOSCOPES



**Two Years Warranty**




# Hitachi Oscilloscopes satisfying a v

**Hitachi Oscilloscopes** are innovative oscilloscopes designed and manufactured by Hitachi Denshi Ltd. The wide experience gained by Hitachi electronic specialists in producing oscilloscopes has resulted in this line of modern oscilloscopes featuring wider band width, more compact design, and light weight.

## TV sync-separator circuit facilitates rapid video signal measurement.


The TV sync-separator circuit is important in providing function essential for oscilloscopes. This circuit, exclusively for video signals, is incorporated in 4 Hitachi Oscilloscope models. Vertical TV synchronizing signals, which conventional simple integration circuits cannot obtain, are now secured with full stability. Adjustment is seldom required even when signal level variations occur.

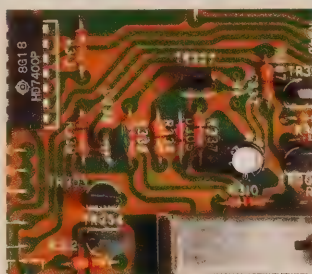

Board mounted with exclusive sync-separator circuit

## Extra-high sensitivity; vertical sensitivity of 1mV/div. now available.

This 1mV/div. sensitivity is highly effective in measuring video signals and checking transistor or IC circuits that handle microsignals such as those in microcomputers. Very weak analog signals can also be measured, facilitating measurement of signals from various detecting instruments and thus enabling wide measuring applications.

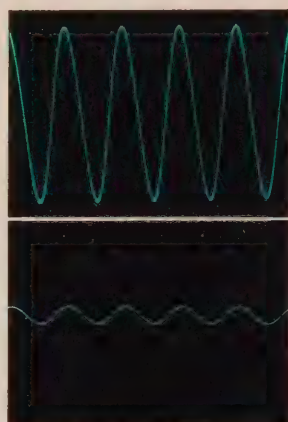


Sensitivity 1mV/div. for measuring microsignals

Through adopting circuitry with linear IC's and logic IC's plus modern manufacturing techniques, including automatic component-insertion machines, these oscilloscopes offer increased stability, improved reliability, excellent performance, and enhanced operating ease.

## Built-in signal delay line for leading edge observation of quick-rising waveforms (V-301 and V-302).

A problem common in measuring high-speed pulses is the difficulty encountered in measuring waveforms leading edge.

Waveforms are subjected to sweeping simultaneously with signal waveforms after a predetermined time has elapsed, thus enabling accurate leading edge observation of rapid waveforms.

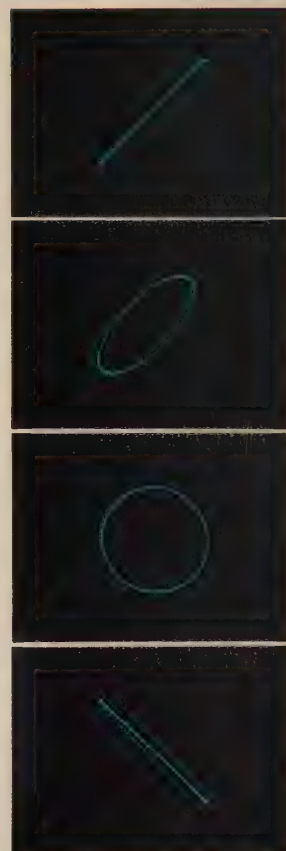

Phase differences easily measurable by X-Y operation

## X-Y operation very convenient for measuring phase difference of two waveforms.

The X-Y operation is an important function for assuring accurate measurement of phase differences. By inputting CH1 signals into the X axis and CH2 signals into the Y axis, measurement of phase for two frequencies can be accurately effected.



**Hitachi Oscilloscope V-151 DC-15MHz single-trace**

- ① TV sync-separator circuit
- ② High-sensitivity 1mV/div (5MHz).
- ③ X-Y operation
- ④ Sweep-time magnifier (10 times)
- ⑤ Trace rotation
- ⑥ Z-axis input (Intensity modulation)



**Hitachi Oscilloscope V-152 DC-15MHz dual-trace**


- ① TV sync-separator circuit
- ② High-sensitivity 1mV/div (5MHz).
- ③ X-Y operation
- ④ Sweep-time magnifier (10 times)
- ⑤ Trace rotation
- ⑥ Z-axis input (Intensity modulation)



# Wide variety of needs.

**Sweep-time magnifier effective for precise measurement; sweep time magnifying 10 times with one-touch operation.**


The sweep-time magnifier function, incorporated in Hitachi's oscilloscopes, is essential to attain fine measurement of waveforms. One-touch, 10-time magnifying of sweep time assures precise measuring of complicated waveforms or noise.

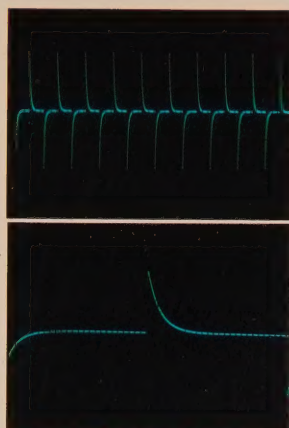

Noise clearly observable by sweep magnifier

**Trace rotation system for easily adjusting bright-line inclination caused by terrestrial magnetism.**


When bright lines are inclined by the influence of terrestrial magnetism, this rotation system promptly compensates and corrects lines to the proper locations, rendering accurate observation constantly feasible.

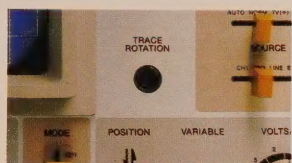

Bright-line inclination easily adjustable with screwdriver

**Z-axis input provided—possible to use as CRT display.**


In addition to the X axis and Y axis, a Z-axis input (intensity modulation terminal) is provided. Input to the Z axis of external signals, plus X-Y display, enables display in characters and/or figures.

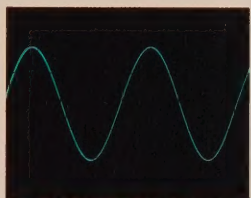

Sweep time settable in accordance with signal speeds

**0.2μs~0.2s—wide sweep range setting.**

The sweep range can be set from 0.2μs to 0.2s in 19 calibrated steps. By setting the sweep time according to signal speeds, waveforms can be swept over the entire CRT tube surface.

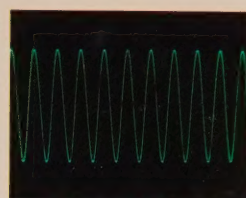

Sweep time settable in accordance with signal speeds

**One-touch shifting of waveform slopes.**

The knob for shifting negative or positive slopes of waveforms is on the same axle as the trigger level knob. Pulling this knob effects setting of positive slopes and depressing sets the negative slopes, causing instantaneous shifting of waveform slopes.



Waveform slope rises/falls observable by one-touch knob operation

**Five modes of vertical deflection operation (Type V-152 and V-302).**


Vertical display changes for five modes (CH1, CH2, DUAL, ADD, and DIFF) provide multipurpose applications of time difference measuring, calculation of waveform additions or reductions, and others.

**Panel layout with color-coding of respective functions.**

The panel layout is designed to create maximum operating ease by considering measuring processes and operation frequency. The layout is divided into three blocks according to respective functions identified by different colors. This convenience-oriented design for users improves daily controllability and drastically reduces operating errors.




Mode changeable by setting a switch

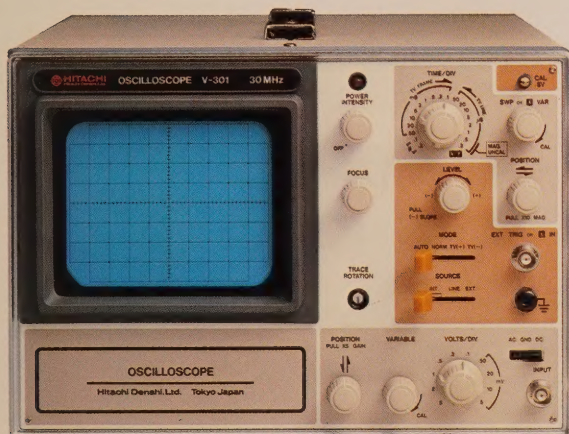

**Hitachi Oscilloscope V-301 DC-30MHz single-trace**

- ① TV sync-separator circuit
- ② High-sensitivity 1mV/div (5MHz).
- ③ Signal delay line
- ④ X-Y operation
- ⑤ Sweep-time magnifier (10 times)
- ⑥ Trace rotation
- ⑦ Z-axis input (Intensity modulation)

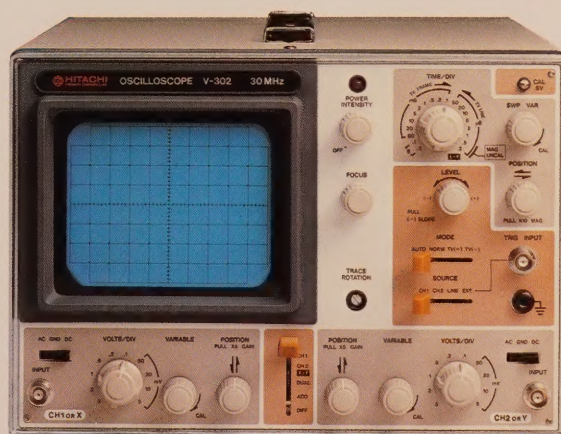
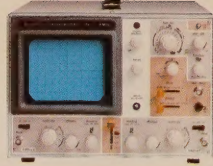

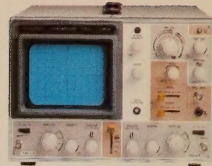


**Hitachi Oscilloscope V-302 DC-30MHz dual-trace**

- ① TV sync-separator circuit
- ② High-sensitivity 1mV/div (5MHz).
- ③ Signal delay line
- ④ X-Y operation
- ⑤ Sweep-time magnifier (10 times)
- ⑥ Trace rotation
- ⑦ Z-axis input (Intensity modulation)



# SPECIFICATIONS

	V-151	V-152	V-301	V-302																																				
																																								
• CRT Display area Acceleration potential Intensity modulation	130BUB31 (5-inch, round shape) 8x10div (1div=9.5mm) Approx. 2kV Over 5Vp-p	130BUB31 (5-inch, round shape) 8x10div (1div=9.5mm) Approx. 2kV Over 5Vp-p	130BTB31 (5-inch, round shape) 8x10div (1div=9.5mm) Approx. 4kV Over 5Vp-p	130BTB31 (5-inch, round shape) 8x10div (1div=9.5mm) Approx. 4kV Over 5Vp-p																																				
• Vertical deflection Sensitivity and bandwidth  Rise time Non-distorted Max. amplitude Signal delay line  Input R and C Maximum input voltage Display mode X-Y operation	5mV/div~5V/div ±5%, DC~15MHz, -3dB 1mV/div~1V/div ±6%, DC~5MHz Typ, -3dB (Using x5 amplifier) 24ns More than 4 div at 15MHz  Direct 1M ohm, approx. 30pF 600Vp-p or 300V(DC+AC peak) Single-trace DC~500kHz, 200mV/div Phase difference DC~10kHz 3°	5mV/div~5V/div ±5%, DC~15MHz, -3dB 1mV/div~1V/div ±6%, DC~5MHz Typ, -3dB (Using x5 amplifier) 24ns More than 4 div at 15MHz  Direct 1M ohm, approx. 30pF 600Vp-p or 300V(DC+AC peak) CH1, CH2, DUAL, ADD, DIFF DC~500kHz, 5mV/div~5V/div Phase difference DC~10kHz 3°	5mV/div~5V/div ±5%, DC~30MHz, -3dB 1mV/div~1V/div ±6%, DC~5MHz Typ, -3dB (Using x5 amplifier) 12ns More than 4 div at 30MHz Permits viewing leading edge of displayed waveform Direct 1M ohm, approx. 30pF 600Vp-p or 300V(DC+AC peak) Single-trace DC~500kHz, 200mV/div Phase difference DC~10kHz 3°	5mV/div~5V/div ±5%, DC~30MHz, -3dB 1mV/div~1V/div ±6%, DC~5MHz Typ, -3dB (Using x5 amplifier) 12ns More than 4 div at 30MHz Permits viewing leading edge of displayed waveform Direct 1M ohm, approx. 30pF 600Vp-p or 300V(DC+AC peak) CH1, CH2, DUAL, ADD, DIFF DC~500kHz, 5mV/div~5V/div Phase difference DC~10kHz 3°																																				
• Horizontal deflection Sweep mode TV synchronization Internal External Trigger sensitivity  Trigger slope Sweep time Sweep-time magnifier Max. sweep rate	AUTO, NORM, TV (+), TV (-) TV sync-separator circuit Over 1div (V sync-signal) Over 1Vp-p (V sync-signal) <table border="1"><tr><td>Frequency</td><td>Internal</td><td>External</td></tr><tr><td>20Hz~2MHz</td><td>0.5div</td><td>200mV</td></tr><tr><td>2~15MHz</td><td>1.5div</td><td>800mV</td></tr></table> ± 0.2μs/div~0.2s/div ±5%, 19 calibrated steps 10 times (±7%) 100ns/div	Frequency	Internal	External	20Hz~2MHz	0.5div	200mV	2~15MHz	1.5div	800mV	AUTO, NORM, TV (+), TV (-) TV sync-separator circuit Over 1div (V sync-signal) Over 1Vp-p (V sync-signal) <table border="1"><tr><td>Frequency</td><td>Internal</td><td>External</td></tr><tr><td>20Hz~2MHz</td><td>0.5div</td><td>200mV</td></tr><tr><td>2~15MHz</td><td>1.5div</td><td>800mV</td></tr></table> ± 0.2μs/div~0.2s/div ±5%, 19 calibrated steps 10 times (±7%) 100ns/div	Frequency	Internal	External	20Hz~2MHz	0.5div	200mV	2~15MHz	1.5div	800mV	AUTO, NORM, TV (+), TV (-) TV sync-separator circuit Over 1div (V sync-signal) Over 1Vp-p (V sync-signal) <table border="1"><tr><td>Frequency</td><td>Internal</td><td>External</td></tr><tr><td>20Hz~5MHz</td><td>0.5div</td><td>200mV</td></tr><tr><td>5~30MHz</td><td>1.5div</td><td>800mV</td></tr></table> ± 0.2μs/div~0.2s/div ±5%, 19 calibrated steps 10 times (±7%) 100ns/div	Frequency	Internal	External	20Hz~5MHz	0.5div	200mV	5~30MHz	1.5div	800mV	AUTO, NORM, TV (+), TV (-) TV sync-separator circuit Over 1div (V sync-signal) Over 1Vp-p (V sync-signal) <table border="1"><tr><td>Frequency</td><td>Internal</td><td>External</td></tr><tr><td>20Hz~5MHz</td><td>0.5div</td><td>200mV</td></tr><tr><td>5~30MHz</td><td>1.5div</td><td>800mV</td></tr></table> ± 0.2μs/div~0.2s/div ±5%, 19 calibrated steps 10 times (±7%) 100ns/div	Frequency	Internal	External	20Hz~5MHz	0.5div	200mV	5~30MHz	1.5div	800mV
Frequency	Internal	External																																						
20Hz~2MHz	0.5div	200mV																																						
2~15MHz	1.5div	800mV																																						
Frequency	Internal	External																																						
20Hz~2MHz	0.5div	200mV																																						
2~15MHz	1.5div	800mV																																						
Frequency	Internal	External																																						
20Hz~5MHz	0.5div	200mV																																						
5~30MHz	1.5div	800mV																																						
Frequency	Internal	External																																						
20Hz~5MHz	0.5div	200mV																																						
5~30MHz	1.5div	800mV																																						
• Amplitude calibrator Waveform Voltage	1kHz ±10% Typ, Square wave 0.5V ±3%	1kHz ±10% Typ, Square wave 0.5V ±3%	1kHz ±10% Typ, Square wave 0.5V ±3%	1kHz ±10% Typ, Square wave 0.5V ±3%																																				
• Power requirements	100V (120/220/240V) ±10% 50/60Hz, 40W	100V (120/220/240V) ±10% 50/60Hz, 40W	100V (120/220/240V) ±10% 50/60Hz, 40W	100V (120/220/240V) ±10% 50/60Hz, 40W																																				
• Dimensions	Approx. 275(W)x190(H)x400(D)mm	Approx. 275(W)x190(H)x400(D)mm	Approx. 275(W)x190(H)x400(D)mm	Approx. 275(W)x190(H)x400(D)mm																																				
• Weight	Approx. 8.5kg	Approx. 8.5kg	Approx. 8.5kg	Approx. 8.5kg																																				
• Ambient operation temperature	0~+40°C	0~+40°C	0~+40°C	0~+40°C																																				
• Probe	AT-10AB1.5. . . . . 1	AT-10AB1.5. . . . . 2	AT-10AB1.5. . . . . 1	AT-10AB1.5. . . . . 2																																				

Specifications are subject to change for improvement without prior notice.



## Hitachi Denshi, Ltd.

1-23-2, Kanda Suda-cho, Chiyoda-ku, Tokyo 101, Japan Phone: (03) 255-8411 Telex: J24178

### Hitachi Denshi America, Ltd.

- Headquarters and  
East Coast Office  
West Coast Office  
Midwest Office  
Southwest Office  
Southeast Office  
Central Western Office  
Northwest Office
- 175 Crossways Park West, Woodbury, New York 11797, U.S.A.  
Phone: (516) 921-7200, TWX: (25) 510-211-1899
  - 21015-21023 So. Figueroa Street, Carson, Calif. 90745, U.S.A.  
Phone: (213) 328-2110, TWX: (25) 910-349-6952
  - 1725 North 33rd Ave., Melrose Park, Illinois 60160, U.S.A.  
Phone: (312) 344-4020, TWX: (25) 910-226-0411
  - 14169 Proton Road, Dallas, Texas 75240, U.S.A.  
Phone: (214) 233-7623, TWX: (25) 910-860-5775
  - 3610 Clearview Parkway, Doraville, Georgia 30340, U.S.A.  
Phone: (404) 451-9453, TWX: (25) 810-757-4228
  - 3538 Peoria, Aurora, Colorado 80010, U.S.A.  
Phone: (303) 344-3156, TWX: (25) 910-932-2993
  - 1051 Andover Park West, Tukwila, Wash. 98188, U.S.A.  
Phone: (206) 575-1680, TWX: (25) 910-444-2155

### Hitachi Denshi, Ltd. (Canada)

- Head Office  
Quebec Office  
Western Office
- 922 Dillingham Road, Pickering, Ontario L1W 1Z6, Canada  
Phone: (416) 839-5134, Telex: (21) 698-1286
  - 8100-G Trans-Canada, St-Laurent, Quebec H4S 1M5, Canada  
Phone: (514) 332-6687, Telex: (21) 582-5739
  - 3433-12th St North-East, Calgary, Alberta T2E 6S6, Canada  
Phone: (403) 276-8508, Telex: (21) 382-5861

### Hitachi Denshi (Europa) GmbH

- Head Office
- Weiskircher Straße 88, D-6054 Rodgau 1 (Jügesheim), West Germany  
Phone: (06106) 3027/8/9, Telex: (41) 417-849

### Hitachi Denshi (U.K.) Ltd.

- Head Office  
Leeds Office
- Lodge House, Lodge Road, Hendon, London NW4 4DQ, United Kingdom  
Phone: (01) 203-4242 Telex: (51) 27449
  - Video House, 55 Manor Road, Leeds, LS11, 5PZ, United Kingdom  
Phone: 0532-30294/5





## **HITACHI DENSHI AMERICA, LTD.\***

### Headquarters and East Coast Office:

175 Crossways Park West, Woodbury, New York 11797, U.S.A.  
Phone:(516)921-7200, TWX:510-221-1899

### Northwest Office:

1051 Andover Park West, Tukwila, Washington 98188, U.S.A.  
Phone:(206) 575-1690, TWX: 910-444-2155

### West Coast Office:

21015 So. Figueroa St., Carson, California 90745, U.S.A.  
Phone:(213) 328-2110, TWX:910-349-6952

### Midwest Office:

1725 No.33rd. Ave., Melrose Park, Illinois 60160, U.S.A.  
Phone(312) 344-4020, TWX: 910-226-0411

### Southwest Office:

14169 Phone Road, Dallas, Texas 75240, U.S.A.  
Phone :(404) 451-9453, TWX: 810-757-4228

### Central Western Office:

Gateway Plaza, Bldg. No.3, Suite 505  
3538 Peoria, Aurora, Colorado 80010, U.S.A.  
Phone:(303) 344-3156, TWX:910-932-2993

## **HITACHI DENSHI LTD., CANADA \***

### Head Office:

922 Dillingham Road, Pickering, Ontario, Canada L1W 1Z6,  
Phone:(416) 839-5134, Telex: 698-1286

### Quebec Office:

8100-G Trans Canada, St. Laurent, Quebec Canada H4S 1M5.  
Phone:(514) 332-6687, Telex: 582-5739

### Western Office

3433-12th St. North-East, Colgray Alberta Canada T2E 6S6.  
Phone:(403) 276-8508, Telex: 382-5861

## **HITACHI DENSHI EUROPA G.m.b.H.\***

Weiskircher Strasse 88

6054 Rodgau-Jugesheim (Rodgau), West Germany

Phone:(06106) 3027-9, Telex:417-849

## **HITACHI DENSHI (U.K.) LTD.\***

### Head Office:

Lodge House, Lodge Road, Hendon, London England NW4, 4DQ.  
Phone:(01) 203-4242, Telex:27449

### Leeds Office:

Video House, 55 Manor Road, Leeds, England LS11 5PZ. .  
Phone:0532-30294/5

\* Subsidiaries of Hitachi Denshi, Ltd.



